










































 


 

 










| Original | Rechange | Original | Rechange |
|---------------|---|------------------|---|
| Power ON/Off |  Power | Ubs/Check |  Setup / OPT / |
| Mute |  Mute / Dimmer | Index+/Vol Ls+ |  Up |
| CD Play |  Play / Slow | Tape 1 Rew |  Left |
| CD Pause |  Pause / Step / Freeze | Tape 1 Hall/Ats |  OK |
| Stop |  Stop / Hold | Tape 1 Play |  Right |
| Tape 1 Rec |  Rec / Rec Mode | Clear |  Exit / Cancel / Clear |
| CD Rewind |  << / Tune- | Index-/Vol Ls- |  Down |
| CD F.FWD |  >> / Tune+ | Erase/Snooze |  Back / Return |
| Prev. |  I<< / Preset- | Volume+ |  Vol+ |
| Next |  >>I / Preset+ | Track+/Karaoke |  CH+ / Page+ |
| 6 Ch/Geq |  Sound / Title | Volume- |  Vol- |
| Disc 5 |  Audio / Lang I/II | Display |  Display / Media |
| Mode |  Picture / Format | Track-/Echo |  CH- / Page- |
| Edit |  Zoom / Size | CD/Theater |  1 |
| Sleep |  Sleep / Timer | Mark/Delete |  2 |
| Program |  TV/Radio / | Space/Default 3D |  3 |
| Funct./Direct |  D.Menu / Top | Pr 4 |  4 |



| Original | Recharge | Original | Recharge |
|------------------|--|--------------|---|
| Pr 5 |  5 | Disc 3 Eject |  +  Shift + 3 |
| Pr 6 |  6 | Disc 4 Eject |  +  Shift + 4 |
| Pr 7 |  7 | | |
| Pr 8 |  8 | | |
| Pr 9 |  9 | | |
| Pr 0/10 |  0 | | |
| Tape 2 Pre./eq |  Fav / Marker / PC | | |
| Repeat |  Green / APP / Repeat | | |
| Dimmer |  +  Shift + Mute / Dimmer | | |
| Tape 2 |  +  Shift + Stop / | | |
| Tape 2 REC./Jazz |  +  Shift + Rec / Rec Mode | | |
| Tape 1 F.FWD |  +  Shift + >> / | | |
| Tape 2 |  +  Shift + I<< / Preset- | | |
| Tape 2 FF/AudioR |  +  Shift + >>I / Preset+ | | |
| Tape 2 |  +  Shift + Right | | |
| Disc 1 Eject |  +  Shift + 1 | | |
| Disc 2 |  +  Shift + 2 | | |



Eject/2.1CH