



 






 

 

 
 
 


 







 









Original	Rechange	Original	Rechange
 Power	 Power	 0	 0
 #	 D. Menu	 zz	 Sleep
 Open/Close	 Eject	 DVD	 Smart
 Mute	 Mute	 Menu	 Menu
 Input 1	 AV	 [-]	 Subt
 1	 1	 Exit	 Exit
 2	 2	 I<<	 I<<
 3	 3	 >>I	 >>I
 Input 2	 3D	 Tone	 Dual
 4	 4	 Mode	 List
 5	 5	 Up / Tune+ /	 Up
 6	 6	 Up / Tune+ /	 >>
 7	 7	 Vol+	 Vol +
 8	 8	 Left	 Left
 9	 9	 Preset / Play / OK	 Ok
 Tuner	 Media	 Right	 Right
 Picture	 Format	 Vol-	 Vol -





Original	Recharge	Original	Recharge
Down / Tune- /	Down		
Down / Tune- /	<<		
Stop / FM Mode	Stop		
Stop / FM Mode	Red		
Pause	Pause		
RDS Search	TV/R		
RDS Search	Green		
Repeat / RDS Display	Text		
Repeat / RDS Display	Info		
Repeat / RDS Display	Yellow		

