






Original		Rechange		Original		Rechange	
	Power		Power		Return / Text		Shift + Back
	Mute		Mute		Subtitle		Subt
	Red / Eject		Red		Display		Shift + Info
	Red / Eject		Eject		Menu / Info		Info
	Green / Title		Green		Menu / Info		D. Menu
	Yellow / DVD		Yellow		Menu		Menu
	Yellow / DVD		Options		Up		Up
	Blue / A-B		Blue		Source		AV
	<</[≡o]		<<		Left		Left
	>>/[≡?]		>>		OK		Ok
	l<</[≡+]		l<<		Right		Right
	>>l/[≡..]		>>l		EPG		Guide
	Play		Play		Down		Down
	Pause		Pause		Exit		Exit
	Stop		Stop		Vol+		Vol +
	Angle / [≡i]		Smart		FAV		Pre Ch
	Return / Text		Text		CH+		Ch +





Original		Rechange		Original		Rechange	
	Vol-		Vol -				
	REP		Rec				
	CH-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Audio		Dual				
	0		0				
	Recall / Goto		Back				

