 

 

















 

 







































Original	Rechange
	 Zoom / Size
	 Power
	 TV/Radio /
	 Guide / EPG / -/-
	 Info / Angle
	 Picture / Format
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List

Original	Rechange
	 0
	 Display / Media
	 Setup / OPT /
	 Up
	 Menu / Home
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Fav / Marker / PC
	 CH+ / Page+
	 Vol-
	 Audio / Lang I/II
	 CH- / Page-





Original	Recharge	Original	Recharge
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Brightness-		Yellow / YouTube / Repeat
	Blue /		Blue / Prime Video / Random
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	<<		<< / Preset-
	>>		>> / Tune+
	>>		>> / Preset+
	Text		Text / Goto
	T.Opt		D.Menu / Top

Original	Recharge

