 

 


 

 

 

 

 


 











Original	Recharge	Original	Recharge
	Power		Power
	Mute		Mute / Dimmer
	+		Vol+
	-		Vol-
	Line 1		1
	Line 2		2
	OPT		3
	COX		4
	Bluetooth		9
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+

