





























 

























 

 

 





Original	Recharge	Original	Recharge
 Power	 Power	 0 >	 Up
 Mute	 Mute / Dimmer	 < *	 Left
 Green	 Green / APP / Repeat	 * >	 Right
 1	 1	 [>>]	 PRESET+ >> / Preset+
 2	 2	 [<<]	 << / Tune-
 3	 3	 [▼]	 GOTO Text / Goto
 4	 4	 [3 >]	 SIZE ZOOM Zoom / Size
 5	 5	 [>>]	 TUNE+ >> / Tune+
 6	 6	 Rec	 REC MODE Rec / Rec Mode
 7	 7	 [<]	 RDS AV / Input / RDS
 8	 8	 (▼)	 FORMAT PICTURE Picture / Format
 9	 9	 [>]	 STEP-FREEZE Pause / Step / Freeze
 0	 0	 Play	 SLOW Play / Slow
 1-	 GUIDE EPG Guide / EPG / -/--	 ↔	 HOLD Stop / Hold
 Vol-	 VOL- Vol-		
 Vol+	 VOL+ Vol+		
 < 0	 Down		

