

 



 

 

 

 

 

 

 



 

 

 

 

 

 

 

 

 

 

 

 



 

 

 

 




 


 






Original		Rechange		Original		Rechange	
	Power		Power		Timer		Sleep / Timer
	1		1		Mute		Mute / Dimmer
	2		2		Up		Up
	3		3		CH+		CH+ / Page+
	4		4		Down		Down
	5		5		CH-		CH- / Page-
	6		6		Right		Right
	7		7		Vol+		Vol+
	8		8		Left		Left
	9		9		Vol-		Vol-
	0		0		RC/A/B		Audio / Lang I/II
	i		Info / Angle		X		AV / Input / RDS
	TV		Smart / List		E/L		Display / Media
	OK		OK		A/OO		Subtitle / EQ
	F		Fav / Marker / PC		??		Back / Return
	R		TV/Radio /		??		Exit / Cancel / Clear
	M		Menu / Home		??		Picture / Format

