 

 

 

 

 



 

 

 

 

 

 

 

 

 

 

 

 








 

 










Original	Rechange
 Power	 Power
 Tv/Radio	 TV/Radio /
 Blank	 Sleep / Timer
 T.Opt.	 Sound / Title
 Text	 Text / Goto
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Rechange
 Q.View	 Picture / Format
 FAV	 Fav / Marker / PC
 3D	 Zoom / Size
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 CH+ / Page+
 Page-	 CH- / Page-
 L/R	 Audio / Lang I/II
 Info	 Info / Angle
 Still	 Menu / Home
 Settings	 Setup / OPT /
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





Original	Recharge	Original	Recharge
 OK	 OK		
 Back	 Back / Return		
 Exit	 Exit / Cancel / Clear		
 Subtitle	 Subtitle / EQ		
 Guide	 Guide / EPG / -/--		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Recharge

