





































Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE-CH	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 CH LIST	 Smart / List
 Vol+	 Vol+

Original	Rechange
 Vol-	 Vol-
 Ch+	 CH+ / Page+
 Ch-	 CH- / Page-
 Settings	 Setup / OPT /
 Home	 Menu / Home
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle
 E-Manual	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Return	 Back / Return
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Recharge		Original		Recharge	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Pic Size		Zoom / Size				
	Picture		Picture / Format				
	Ad/Subt.		Subtitle / EQ				
	Stop		Stop / Hold				
	<</ <<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>/>>		>> / Tune+				

