




Original		Rechange		Original		Rechange	
	Index		Play / Slow		6		6
	Red / -1		Red / Netflix / Search		Contrast-		<< / Tune-
	Green / Timer /		Green / APP / Repeat		Contrast+		>> / Tune+
	Yellow / Stop		Yellow / YouTube / Repeat		7		7
	Blue / Reveal		Blue / Prime Video / Random		8		8
	[≡]]]		Rec / Rec Mode		9		9
	Cancel		Exit / Cancel / Clear		Brightness-		I<< / Preset-
	Size		Zoom / Size		Brightness+		>>I / Preset+
	TV		TV/Radio /		P/C		Back / Return
	Text		Text / Goto		0		0
	1		1		AV		AV / Input / RDS
	2		2		←•→		Display / Media
	3		3		**		Smart / List
	Tint-		Shift + Left		PIP		Picture / Format
	Tint+		Shift + Right		i		Info / Angle
	4		4		i		Menu / Home
	5		5		----		Subtitle / EQ





Original	Rechange	Original	Rechange
	Up / P+		Up
	Up / P+		CH+ / Page+
	Mute		Mute / Dimmer
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	AUX		Shift + 7
	Down / P-		Down
	Down / P-		CH- / Page-
	Power		Power





	Original	Recharge	Original	Recharge
	<	I<< / Preset-		
	>	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Pause	Pause / Step / Freeze		
	Play	Play / Slow		
	P+	CH+ / Page+		
	P-	CH- / Page-		
	Power	Power		





Original	Recharge	Original	Recharge
-1	Red / Netflix / Search	*+	>> / Preset+
+1	Green / APP / Repeat	P/C	Back / Return
STOP	Yellow / YouTube / Repeat	0	0
E7	Blue / Prime Video / Random	PIP	Picture / Format
E8	Text / Goto	i	Info / Angle
1	1	P+	CH+ / Page+
2	2	Up	Up
3	3	Mute	Mute / Dimmer
4	4	Left	Left
5	5	Vol-	Vol-
6	6	OK	OK
-0	<< / Tune-	Right	Right
0+	>> / Tune+	Vol+	Vol+
7	7	AUX	Shift + 7
8	8	P-	CH- / Page-
9	9	Down	Down
-*	<< / Preset-	Power	Power

