




Original	Rechange
 Standby	 Power
 TV/STB	 AV / Input / RDS
 Mute	 Mute / Dimmer
 F.List	 Display / Media
 Repeat	 Shift + Green / APP / APP /
 Res.	 Shift + Picture / Format / Format
 Picture	 Picture / Format
 Book	 Shift + Smart / List / List
 Next Page	 Shift + Display / Media / Media
 R.Skip	 I<< / Preset-
 REW	 << / Tune-
 FWD	 >> / Tune+
 F.Skip	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Rechange
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 CH/PG+	 CH+ / Page+
 CH/PG-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol+	 Vol+
 Vol-	 Vol-
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 Back	 Back / Return
 FAV	 Fav / Marker / PC
 SAT List	 Smart / List
 Option	 Setup / OPT /



