



Original	Recharge
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Recharge
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right





Original	Rechange
Left/PTY-	Left
Enter	OK
fslRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Rechange
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	Shift + Up
L-Front-	Shift + Down
Front-R+/Slide	Shift + Right
Front-R-	Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	Shift + CH+ / Page+

Page+





Original	Recharge
Page-/Subwfr-	Shift + CH- /
Test Tone	Text / Goto
Sleep	Sleep / Timer
L-Surr+	Shift + Smart / List
L-Surr-	Shift + Display / Media
Surr-R+	Shift + TV/Radio / Program
Surr-R-	Shift + AV / Input / RDS
S.Back+	Shift + Picture / Format
S.Back-	Shift + D.Menu / Top Menu

Original	Recharge









 





















 
 




Original	Recharge	Original	Recharge
Power DVD	Power	Right	Right
Power Audio	Shift + Power	Left	Left
Muting	Mute / Dimmer	Enter	OK
Vol+	Vol+	fs/Rate/Audio	Audio / Lang I/II
Vol-	Vol-	Subtitle	Subtitle / EQ
I<<	I<< / Preset-	Set Up	Setup / OPT /
Play	Play / Slow	DVD/HDD/Title/Gr	Blue / Prime Video / Random
>>I	>>I / Preset+	Zoom/>	Zoom / Size
<<	<< / Tune-	Back	Back / Return
Stop	Stop / Hold	VFP/Progressive	Smart / List
Pause	Pause / Step / Freeze	Angle	Info / Angle
>>	>> / Tune+	EX/Es/Return	Shift + Back / Return
Menu	Menu / Home	Cancel	Exit / Cancel / Clear
Top Menu/STB	D.Menu / Top	DVD Card/Rec	Rec / Rec Mode
On Screen	Picture / Format	1	1
Up	Up	2	2
Down	Down	3	3





Original		Rechange		Original		Rechange	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	10		Guide / EPG / -/--				
	+10		Fav / Marker / PC				
	Surround		Eject / Surround				
	Display/Dimmer		Display / Media				
	Input Analog/Digital		AV / Input / RDS				
	Thumbnail		Yellow / YouTube / Repeat				
	Slide		Text / Goto				
	3D/S Effect		Sound / Title				
	Page+		CH+ / Page+				














Original	Rechange
Power Audio	Power
FM/AM	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
Stop/Memory	Stop / Hold
Up/TA7News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
Left/PTY-	Left
On	Picture / Format
Smart Surround Setup	Smart / List
1 FM/AM	1
2 FM/AM	2

Original	Rechange
3 FM/AM	3
4 FM/AM	4
5 FM/AM	5
6 FM/AM	6
7 FM/AM	7
8 FM/AM	8
9 FM/AM	9
10 FM/AM	0
+10 FM/AM	Fav / Marker / PC
EX/ES/Return	Back / Return
Display/Dimmer	Display / Media
Decode	Shift + 2
EQ Freq	Shift + 3
Bass Boost	Shift + 4
C.Tone	Shift + 5
EQ Level+	Shift + 6
Midnight	Shift + 7





Original	Rechange	Original	Rechange
 Effect	 +  Shift + 8		
 EQ Level-	 +  Shift + 9		
 A.Position	 +  Shift + 0		

