






Original		Rechange	
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	P+		Shift + CH+ / Page+

Page+

Original		Rechange	
	P+		>>  / Preset+
	P-		Shift + CH- /
	P-		l<< / Preset-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Up		CH+ / Page+
	Down		CH- / Page-
	OK		OK
	Right		Vol+
	Fav		Fav / Marker / PC
	Left		Vol-
	Info		Info / Angle
	Lang / Red		Red / Netflix / Search
	Lang / Red		Audio / Lang I/II
	Pause / Blue		Blue / Prime Video / Random





Original	Recharge
 Pause / Blue	 Pause / Step / Freeze
 Sound / Green	 Green / APP / Repeat
 Sound / Green	 Sound / Title
 Text / Yellow	 Yellow / YouTube / Repeat
 Text / Yellow	 Text / Goto
 SAT	 Shift + 0
 SAT	 Smart / List
 Recall	 Back / Return
 TV / SAT	 Display / Media
 EPG	 Guide / EPG / -/--

Original	Recharge

