



Original		Recharge		Original		Recharge	
	Power		Power		Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		SFI / EPG		Guide / EPG / -/--		Guide / EPG / -/--
	6		Exit / Recall		Exit / Recall		Exit / Recall
	7		Exit / Recall		Exit / Recall		Exit / Cancel / Clear
	8		Info		Info		Info / Angle
	9		TV / Radio		TV / Radio		TV/Radio /
	0		Menu		Menu		Menu / Home
	AV		Prog+		Prog+		CH+ / Page+
	OPT		Prog-		Prog-		CH- / Page-
	Red		Vol+		Vol+		Vol+
	Green		Vol-		Vol-		Vol-
	Yellow		Sleep		Sleep		Sleep / Timer
			Red / Netflix / Search				
			Green / APP / Repeat				
			Yellow / YouTube / Repeat				



