



Original	Recharge
Power	Power
Main Menu	Menu / Home
Tape	Shift + 5
Programme	Setup / OPT /
MEM	Display / Media
Exit/Status	Exit / Cancel / Clear
Programme	CH+ / Page+
Programme	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Recharge
0/--	0
AV	AV / Input / RDS
0000	Back / Return
SP/LP	Picture / Format
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze

