



| Original | Recharge              |
|----------|-----------------------|
|          | Power                 |
|          | Display / Media       |
|          | Play / Slow           |
|          | Pause / Step / Freeze |
|          | 6                     |
|          | Fav / Marker / PC     |
|          | Audio / Lang I/II     |
|          | Menu / Home           |
|          | Exit / Cancel / Clear |
|          | Up                    |
|          | Down                  |
|          | I<< / Preset-         |
|          | >>I / Preset+         |
|          | OK                    |
|          | Stop / Hold           |
|          | << / Tune-            |
|          | >> / Tune+            |

| Original | Recharge                    |
|----------|-----------------------------|
|          | TV/Radio /                  |
|          | Blue / Prime Video / Random |
|          | Text / Goto                 |
|          | Shift + Sleep / Timer       |
|          | Zoom / Size                 |
|          | Sleep / Timer               |
|          | Mute / Dimmer               |
|          | Vol+                        |
|          | Vol-                        |
|          | Shift + TV/Radio / Program  |
|          | D.Menu / Top                |
|          | Sound / Title               |
|          | Eject / Surround            |
|          | Picture / Format            |
|          | Shift + Mute / Dimmer       |

