



 

 

















 

 
 
 







Original	Rechange	Original	Rechange
 Power	 Power	 Digest	 Setup / OPT /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Play	 Play / Slow
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 << / Tune-	 << / Tune-
 7	 7	 >> / Tune+	 >> / Tune+
 8	 8	 Rec	 Rec / Rec Mode
 9	 9	 Stop	 Stop / Hold
 0	 0	 UP	 Up
 Info	 Info / Angle	 Down	 Down
 FAV	 Fav / Marker / PC	 Right	 Right
 Page+	 Shift + CH+ /	 Left	 Left
 Page-	 Shift + CH- /	 OK	 OK
 Audio	 Audio / Lang I/II	 CH+	 CH+ / Page+

Original	Rechange	Original	Rechange
 Digest	 Setup / OPT /	 Menu	 Menu / Home
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear	 Play	 Play / Slow
 Zoom	 Zoom / Size	 Pause	 Pause / Step / Freeze
 << / Tune-	 << / Tune-	 >> / Tune+	 >> / Tune+
 Rec	 Rec / Rec Mode	 Stop	 Stop / Hold
 UP	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 OK	 OK	 CH+	 CH+ / Page+



