

















| Original  | Rechange  | Original  | Rechange  |
|---|---|---|---|
|  Power   |  Power                   |  Start Debut + |  Green / APP / Repeat        |
|  Review  |  Setup / OPT /           |  Stop Fin +    |  Blue / Prime Video / Random |
|  Tv/VCR  |  TV/Radio /              |  Date+         |  Vol+                        |
|  Audio   |  Audio / Lang I/II       |  PR+           |  CH+ / Page+                 |
|  ---     |  Smart / List            |  Start Debut - |  Red / Netflix / Search      |
|  1       |  1                       |  Stop Fin -    |  Yellow / YouTube / Repeat   |
|  2       |  2                       |  Date-         |  Vol-                        |
|  3       |  3                       |  PR-           |  CH- / Page-                 |
|  4       |  4                       |  Prog          |  D.Menu / Top                |
|  5      |  5                      |  Timer/?      |  Shift + Sleep / Timer      |
|  6     |  6                     |  ///         |  Display / Media           |
|  7     |  7                     |  30 Sec/>>   |  Back / Return             |
|  8     |  8                     |  <<          |  << / Tune-                |
|  9     |  9                     |  Play        |  Play / Slow               |
|  X     |  Exit / Cancel / Clear |  >>          |  >> / Tune+                |
|  0     |  0                     |  Rec         |  Rec / Rec Mode            |
|  Timer |  Sleep / Timer         |  Stop        |  Stop / Hold               |







