



































Original	Recharge	Original	Recharge
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Still	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tune-	 << / Tune-	Menu Left	 Left
Tune+	 >> / Tune+	OK Enter	 OK
Tone-	 I<< / Preset-	Menu Right	 Right
Tone+	 >>I / Preset+	Back	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Swap	 Back / Return
Bright+ Mode	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Update	 D.Menu / Top	Display	 Display / Media
Help	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Recharge	
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
Guide -/-- 1.	Guide / EPG / -/--	
0/10	0	0
2.Fav P/C 2.	Fav / Marker / PC	
Red	Red / Netflix / Search	
Green	Green / APP / Repeat	
Yellow	Yellow / YouTube / Repeat	
Blue	Blue / Prime Video / Random	
On/Off	+ Shift + Power	
Mix Scan	+ Shift + Text / Goto	

Goto

Original	Recharge	
AV 2	+ Shift + AV / Input / RDS	
Audio+	+ Shift + Vol+	
Audio-	+ Shift + Vol-	
Disp	+ Shift + Display / Media	
On Pip	+ Shift + 1	
Dim Pip	+ Shift + 2	
Rotate Pip	+ Shift + 3	
Search	+ Shift + Red / Netflix /	

