





Original	Recharge
 Mute	 Mute / Dimmer
 TV/SAT	 AV / Input / RDS
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sat List	 Smart / List
 0	 0
 TV/R	 TV/Radio /
 CH-PG+	 CH+ / Page+
 EPG	 Guide / EPG / -/-

Original	Recharge
 Vol+	 Vol+
 CH/PG-	 CH- / Page-
 FAV	 Fav / Marker / PC
 Vol-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Subt	 Green / APP / Repeat
 Green / Subt	 Subtitle / EQ





Original	Recharge	Original	Recharge
 Yellow / Text	 Text / Goto		
 Yellow / Text	 Yellow / YouTube / Repeat		
 Blue / Sleep	 Blue / Prime Video / Random		
 Blue / Sleep	 Sleep / Timer		
 Option 1	 D.Menu / Top		
 Option 2	 Setup / OPT /		
 Pal / NTSC	 Picture / Format		
 Pause	 Stop / Hold		
 Freeze	 Pause / Step / Freeze		
 Zoom	 Zoom / Size		

Original	Recharge

