












 








 


 














 




 
 




 
 





 



 
 




 















Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Energy Saving		Sleep / Timer		Vol+		Vol+
	Energy Saving		Sleep / Timer		Vol+		Vol+
	AV Mode		Picture / Format		P+		CH+ / Page+
	Input		AV / Input / RDS		Vol-		Vol-
	Tv/Rad		TV/Radio /		3D		Zoom / Size
	1		1		Mute/Delete		Mute / Dimmer
	2		2		P-		CH- / Page-
	3		3		Menu		Menu / Home
	4		4		NetCast		Sound / Title
	5		5		Q.Menu		D.Menu / Top
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	List		Smart / List		Down		Down
	0		0		Exit		Exit / Cancel / Clear
	Q.Vlew		Setup / OPT /		Back		Back / Return





Original		Recharge		Original		Recharge	
	Guide		Guide / EPG / -/--				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue/L/R/Select		Blue / Prime Video / Random				
	Text		Text / Goto				
	T.Opt		Shift + Setup / OPT / Tools				
	Subtitle		Subtitle / EQ				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Simplink		Display / Media				
	Info		Info / Angle				
	AD		Audio / Lang I/II				
	APP/*		Shift + Green / APP / Repeat				

