 

 

 







 



 



 











 



 



 



 



 

 





 



 











Original		Rechange		Original		Rechange	
	Power		Power		>>		>> / Tune+
	Open/Close		Eject / Surround		>>		>>  / Preset+
	Function		Smart / List		Stop		Stop / Hold
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Speaker Level		TV/Radio /
	4		4		Vol+		Vol+
	5		5		Optical / Tv Sound		Setup / OPT /
	6		6		Sound Effect		Sound / Title
	7		7		Vol-		Vol-
	8		8		Mute		Mute / Dimmer
	9		9		Home		Menu / Home
	Clear		Exit / Cancel / Clear		3D Sound		Zoom / Size
	0		0		Info/Menu		Info / Angle
	Repeat		Shift + Green / APP /		Up/Preset+		Up
	l<<		l<< / Preset-		Left/Tuning-		Left
	<<		<< / Tune-		Enter		OK





Original	Recharge
Right/Tuning+	Right
Down/Presets-	Down
Back	Back / Return
Title/Pop Up	Picture / Format
Disc Menu	D.Menu / Top
Red/RDS	Red / Netflix / Search
Green/PTY	Green / APP / Repeat
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Sleep	Sleep / Timer
Music ID	Text / Goto
*	Display / Media
Power Tv	Shift + Power
Volum+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+

Original	Recharge
AV Input Tv	AV / Input / RDS
Volum- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

