



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info / Angle
 Mute	 Mute / Dimmer
 ideal	 Smart / List
 Back	 Back / Return
 TV	 TV/Radio /
 TV	 Shift + 1

Original	Rechange
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Red/M	 Red / Netflix / Search
 Green/Sound	 Sound / Title
 Green/Sound	 Green / APP / Repeat
 Yellow/Vision	 Yellow / YouTube / Repeat
 Blue/Menu	 Blue / Prime Video / Random
 Blue/Menu	 Menu / Home
 Text	 Text / Goto
 Size	 Zoom / Size
 Stop	 Stop / Hold







 
 

 


Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info / Angle
 Mute	 Mute / Dimmer
 ideal	 Smart / List
 Back	 Back / Return
 TV	 TV/Radio /
 TV	 Shift + 1

Original	Rechange
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Red/M	 Red / Netflix / Search
 Green/Sound	 Audio / Lang I/II
 Green/Sound	 Green / APP / Repeat
 Yellow/Vision	 Yellow / YouTube / Repeat
 Blue/Menu	 Blue / Prime Video / Random
 Blue/Menu	 Menu / Home
 Text	 Text / Goto
 Size	 Zoom / Size
 Stop	 Stop / Hold





Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	1		1		Left		Left
	2		2		Right		Right
	3		3		Down		Down
	4		4		Red/M		Red / Netflix / Search
	5		5		Green/Sound		Green / APP / Repeat
	6		6		Green/Sound		Sound / Title
	7		7		Yellow/Vision		Yellow / YouTube / Repeat
	8		8		Blue/Menu		Blue / Prime Video / Random
	9		9		Blue/Menu		Menu / Home
	0		0		Text		Text / Goto
	i		Info / Angle		Size		Zoom / Size
	Mute		Mute / Dimmer		Stop		Stop / Hold
	ideal		Smart / List				
	Back		Back / Return				
	TV		TV/Radio /				
	TV		Shift + 1				

