

















































 
 






Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Recharge
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 Samsung TV Plus	 TV/Radio /
 Up	 Up
 Disney+	 Picture / Format
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Recharge		Original	Recharge
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Settings		Setup / OPT /		
	Info		Info / Angle		
	AD/SUBT.		Subtitle / EQ		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	<<		<< / Preset-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	>>		>>  / Preset+		

