



| Original | Recharge |
|------------|-------------------|
| Standby/On | Power |
| Sleep | Sleep / Timer |
| Video 1 | Shift + 4 |
| Video 2 | Shift + 8 |
| Video 3 | Shift + 9 |
| EXT In | Shift + 2 |
| Tuner | Shift + 6 |
| CD | Shift + 3 |
| AUX | Shift + 7 |
| Tape | Shift + 5 |
| Level+ | CH+ / Page+ |
| CH Sel | Fav / Marker / PC |
| Volume+ | Vol+ |
| Level- | CH- / Page- |
| Muting | Mute / Dimmer |
| Volume- | Vol- |
| T.Tone | Display / Media |

| Original | Recharge |
|-----------------------|-----------------------|
| Up/PTY Select | Up |
| P.Scan | Smart / List |
| Left/EON TA | Left |
| Enter/RDS | OK |
| Right/EON PTY | Right |
| Repeat 1/All | Green / APP / Repeat |
| Down/Search | Down |
| Dimmer | Shift + Mute / Dimmer |
| << / Tune- | << / Tune- |
| >> / Tune+ | >> / Tune+ |
| I<< / Preset- | I<< / Preset- |
| Stop / Hold | Stop / Hold |
| >>I / Preset+ | >>I / Preset+ |
| Pause / Step / Freeze | Pause / Step / Freeze |
| Play / Slow | Play / Slow |
| Auto | D.Menu / Top |
| < DSP | Shift + Left |





| Original | Recharge |
|-----------|------------------------|
| DSP > | + Shift + Right |
| Stereo | Audio / Lang I/II |
| SP Setup | Setup / OPT / |
| < Select | + Shift + << / |
| Select > | + Shift + >> / |
| Parameter | Red / Netflix / Search |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Cinema EQ | Subtitle / EQ |

| Original | Recharge |
|---------------|------------------|
| Dynamic Range | Eject / Surround |
| PAL/NTSC | Picture / Format |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

