





 

 









 







 











Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	ECO		Display / Media
	0		0
	EPG		Guide / EPG / -/-
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-

Original	Rechange
	Smart Key
	CH- / Page-
	Info / Angle
	AV / Input / RDS
	Back / Return
	Menu / Home
	Exit / Cancel / Clear
	Up
	Left
	OK
	Right
	Rec / Rec Mode
	Down
	Sleep / Timer
	Text / Goto
	Subtitle / EQ
	Smart / List



