











 


 

 



















Original	Rechange
 Sleep	 Sleep / Timer
 Power	 Power
 Scene 1	 1
 Scene 2	 2
 Scene 3	 3
 Scene 4	 4
 Straight	 Audio / Lang I/II
 Pure Direct	 Subtitle / EQ
 Enhancer	 Text / Goto
 Sur.Decode	 Picture / Format
 < Program	 CH- / Page-
 Program >	 CH+ / Page+
 Input Up	 Shift + Up
 Tuner	 6
 Volume+	 Vol+
 USB	 8
 Input Down	 Shift + Down

Original	Rechange
 NET	 Fav / Marker / PC
 Volume-	 Vol-
 Bluetooth	 9
 Mute	 Mute / Dimmer
 Setup	 Setup / OPT /
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 Top Menu	 D.Menu / Top
 Home	 Menu / Home
 Pop-Up/Menu	 Shift + Menu /
 Red	 Red / Netflix / Search



 









 
 









 















 
Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I<<	I<< / Preset-
Play/Memory	Play / Slow
>>I	>>I / Preset+
<< Tuning	<< / Tune-
Stop/Mode	Stop / Hold
Pause/Band	Pause / Step / Freeze
Tuning >>	>> / Tune+
< Preset	Shift + I<< / Preset-
Preset >	Shift + >>I / Preset+

Original	Recharge





Original	Recharge
 Sleep	 Sleep / Timer
 Power	 Power
 Scene 1	 1
 Scene 2	 2
 Scene 3	 3
 Scene 4	 4
 Input Up	 Shift + Up
 Tuner	 6
 Volume+	 Vol+
 USB	 8
 Input Down	 Shift + Down
 NET	 Fav / Marker / PC
 Volume-	 Vol-
 Bluetooth	 9
 Mute	 Mute / Dimmer
 Up	 Up
 Left	 Left

Original	Recharge
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 Top Menu	 D.Menu / Top
 Home	 Menu / Home
 Pop-Up/Menu	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I<<	 I<< / Preset-
 Play/Memory	 Play / Slow
 >>I	 >>I / Preset+
 << Tuning	 << / Tune-
 Stop/Mode	 Stop / Hold





Original	Recharge	Original	Recharge
 BAND	Pause/Band	 STEP-FREEZE	Pause / Step / Freeze
 TUNING	Tuning >>	 TUNE+	>> / Tune+
 PRESET-	< Preset		Shift + << / Preset-
 PRESET+	Preset >		Shift + >> / Preset+

