 

 
















 

 

 



 





	Original	Recharge	Original	Recharge
	Start	 Power		
	Home	 Menu / Home		
	Mode	 Setup / OPT /		
	Turbo	 Smart / List		
	Up	 Up		
	Left	 Left		
	Stop/OK	 OK		
	Stop/OK	 Stop / Hold		
	Right	 Right		
	Down	 Down		
	Repeat	 Green / APP / Repeat		
	My Space	 Display / Media		
	Nothing 1	 1		
	Mute	 Mute / Dimmer		
	Nothing 2	 2		
	Diagnosis	 D.Menu / Top		

