







 



 







 



 



 

 

 







 

 

 

 



 





 

 

















 













Original		Rechange		Original		Rechange	
	Standby		Power		Down / CH-		Down
	DTV/VCR		AV / Input / RDS		Recall		Fav / Marker / PC
	Mute		Mute / Dimmer		1		1
	Info		Info / Angle		2		2
	TV / Radio		Pause / Step / Freeze		3		3
	Menu		Menu / Home		TTX		Display / Media
	EPG		Guide / EPG / -/--		4		4
	Exit		Exit / Cancel / Clear		5		5
	Up / CH+		Up		6		6
	Up / CH+		CH+ / Page+		OPT		Back / Return
	Left / Vol-		Left		7		7
	Left / Vol-		Vol-		8		8
	OK		OK		9		9
	Right / Vol+		Right		0		0
	Right / Vol+		Vol+		Red		TV/Radio /
	Fav		Smart / List		Green		Audio / Lang I/II
	Down / CH-		CH- / Page-		Yellow		Subtitle / EQ





Original	Recharge	Original	Recharge
 Blue	 Text / Goto		
 Reclist	 Red / Netflix / Search		
 Slow	 Green / APP / Repeat		
 Play	 Yellow / YouTube / Repeat		
 Pause	 Blue / Prime Video / Random		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		

Original	Recharge

