














 








 
 

 

 












 

 






 


 
 

 



 
 
 
 

 
 




	Original	Rechange		Original	Rechange
	Power		Power		PR-
	Red		Red		1
	Green/Cass.		Green		2
	Yellow/Prog		Yellow		3
	Blue/Mem		Blue		4
	Violet/Status		Smart		5
	Exit		Exit		6
	Menu		Menu		7
	Up		Up		8
	Down		Down		9
	Right		Right		0
	Left		Left		AV
	OK		Ok		Index/Mark
	Vol+		Vol +		0000
	Vol-		Vol -		SP/LP
	Mute		Mute		<<
	PR+		Ch +		Play
					Ch -
					1
					2
					3
					4
					5
					6
					7
					8
					9
					0
					AV
					Info
					Media
					Format
					<<
					Play





 




 




 
 

 

 


 


 






 
 

 

 
 
 

 








	Original	Recharge	Original	Recharge
	>>		>>	
	Rec		Rec	
	Stop		Stop	
	Pause		Pause	





	Original	Recharge		Original	Recharge
	Power		Power		PR-
	Red		Red		1
	Green/Cass.		Green		2
	Yellow/Prog		Yellow		3
	Blue/Mem		Blue		4
	Violet/Status		Smart		5
	Menu		Menu		6
	Exit		Exit		7
	Up		Up		8
	Down		Down		9
	Right		Right		0
	Left		Left		AV
	OK		Ok		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	PR+		Ch +		

