


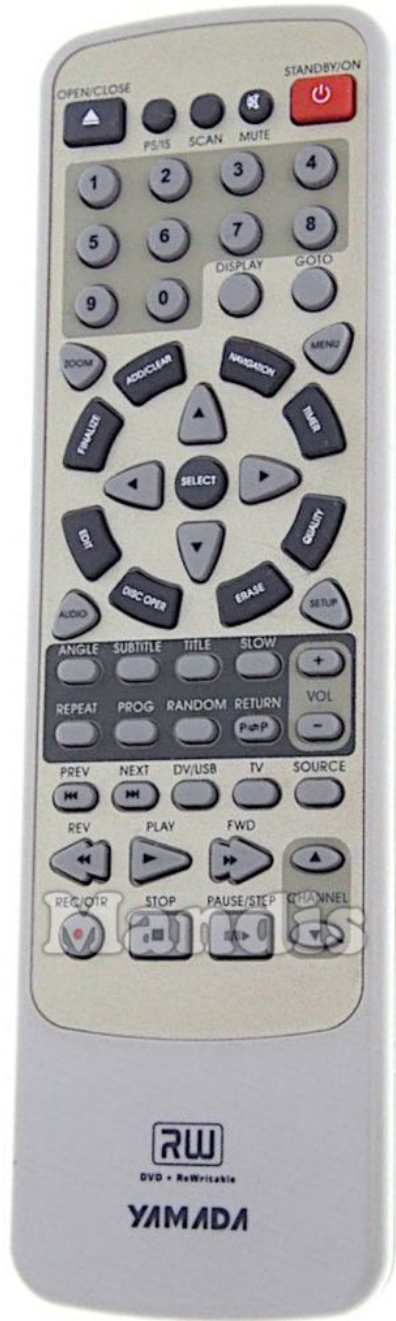





Original		Rechange		Original		Rechange	
	Standby / On		Power		Zoom		Shift + Eject
	Open / Close		Eject		Add / Clear		Exit
	PS/IS		Red		Navigation		List
	Scan		Green		Menu		Menu
	Mute		Mute		Finalize		Yellow
	1		1		Timer		Shift + AV
	2		2		Up		Up
	3		3		Left		Left
	4		4		Select		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Edit		Blue
	8		8		Quality		3D
	9		9		Audio		Dual
	0		0		Disc Oper		Smart
	Display		Info		Erase		Shift + Back
	Goto		Guide		Angle		Format





Original	Rechange	Original	Rechange
	Title		D. Menu
	Setup		Options
	Subtitle		Subt
	Slow		Shift + Play
	Vol+		Vol +
	Vol-		Vol -
	Repeat		Text
	Prog		Sleep
	Random		Shift + TV/R
	Return P<->P		Back
	DV/USB		Media
	I<< Prev		I<<
	Next >>I		I>>
	TV		TV/R
	Source		AV
	<< Rev		<<
	Play		Play

Original	Rechange	Original	Rechange
	Fwd >>		>>
	Channel+		Ch +
	Channel-		Ch -
	Rec / Otr		Rec
	Stop		Stop
	Pause / Step		Pause

