


































 















 
 


















 







Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Rechange
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Right
 +	 Vol+
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/Pause	 Display / Media
 Size/Stop	 Zoom / Size
 Pos/Play	 D.Menu / Top
 Red/ <	 Red / Netflix / Search
 Green/>	 Green / APP / Repeat





























 






Original	Rechange
	
Power	Power
	
1	1
	
2	2
	
3	3
	
PIP	Smart / List
	
4	4
	
5	5
	
6	6
	
[<>]	Picture / Format
	
7	7
	
8	8
	
9	9
	
-/-	Guide / EPG / -/-
	
0	0
	
i	Info / Angle
	
Z	Menu / Home
	
P+	CH+ / Page+

Original	Rechange
	
P+	Up
	
-	Left
	
-	Vol-
	
OK	OK
	
+	Right
	
+	Vol+
	
TXT	Text / Goto
	
P-	CH- / Page-
	
P-	Down
	
AV	AV / Input / RDS
	
Scan/[']	Setup / OPT /
	
PAP/Pause	Pause / Step / Freeze
	
Size/Stop	Stop / Hold
	
Pos/Play	Play / Slow
	
Red/ <	<< / Preset-
	
Green/>	>> / Preset+
	
Yellow/Pause/<	<< / Tune-













 



 

























 















 



 

 

 

 



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Rechange
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Vol+
 +	 Right
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/Pause	 Pause / Step / Freeze
 Size/Stop	 Stop / Hold
 Pos/Play	 Play / Slow
 Red/I<	 I<< / Preset-
 Green/>I	 >>I / Preset+





Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+
	P+		Up
	-		Vol-
	-		Left
	OK		OK
	+		Vol+
	+		Right
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/I<		I<< / Preset-
	Green/>I		>>I / Preset+
	Yellow/Pause/<		<< / Tune-



