

 



















 



 





 











 









 














Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Info / Angle
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 >	 >> / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 <	 << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Rechange
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Image/I>	 Red / Netflix / Search
 Green/Timer	 Green / APP / Repeat



 















 



 



















 







 

 













Original	Recharge	Original	Recharge
Play	Play / Slow		
Yellow/Pause	Yellow / YouTube / Repeat		
Pause	Pause / Step / Freeze		
Blue/Sound	Blue / Prime Video / Random		
Stop	Stop / Hold		
Blue/Sound	Sound / Title		





















Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [<>]	 Zoom / Size
 >	 >> / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 <	 << / Preset-
 0	 0
 i/OSD	 Display / Media

Original	Rechange
 Disc Menu	 D.Menu / Top
 Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red/Picture	 Picture / Format
 Red/Picture	 Red / Netflix / Search


 


















 























 







 

 













Original		Recharge		Original		Recharge	
	Green / Timer		Sleep / Timer				
	Play		Play / Slow				
	Green / Timer		Green / APP / Repeat				
	Yellow/Pause		Yellow / YouTube / Repeat				
	Pause		Pause / Step / Freeze				
	Blue/Sound		Sound / Title				
	Stop		Stop / Hold				
	Blue/Sound		Blue / Prime Video / Random				





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 [<>]	 Zoom / Size
 >	 >> / Preset+
 7	 7
 8	 8
 9	 9
 ?	 Smart / List
 <	 << / Preset-
 0	 0
 Mute	 Mute / Dimmer

Original	Rechange
 i/OSD	 Display / Media
 Z/Disc Menu	 Menu / Home
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 TXT	 Text / Goto
 <<	 << / Tune-
 Down	 Down
 P-	 CH- / Page-
 TV-G	 Guide / EPG / -/-
 >>	 >> / Tune+
 Red / Image / I>	 Red / Netflix / Search
 Red / Image / I>	 Shift + Play / Slow





Original	Rechange
Power	Power
1	1
2	2
3	3
PIP/Audio	Audio / Lang I/II
4	4
5	5
6	6
[<< >]	Zoom / Size
7	7
8	8
9	9
?	Smart / List
I <	I << / Preset-
> I	>> I / Preset+
0	0
i/OSD	Display / Media

Original	Rechange
Z/Disc Menu	Menu / Home
P+	CH+ / Page+
Up	Up
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
TXT	Text / Goto
<<	<< / Tune-
P-	CH- / Page-
Down	Down
TV-G	Guide / EPG / -/-
>>	>> / Tune+
Red/Image/I>	Picture / Format
Red/Image/I>	Red / Netflix / Search
Green/Timer	Green / APP / Repeat





Original	Recharge
Play	Play / Slow
Green/Timer	Sleep / Timer
Yellow/Pause	Yellow / YouTube / Repeat
Pause	Pause / Step / Freeze
Blue/Sound	Blue / Prime Video / Random
Stop	Stop / Hold
Blue/Sound	Sound / Title

Original	Recharge

