



 

 

 

 

 

 

 





















 



 




 










 

 



 







Original		Rechange		Original		Rechange	
	Source		AV / Input / RDS		P +		CH+ / Page+
	Sleep		Sleep / Timer		Vol -		Vol-
	Power		Power		Mute		Mute / Dimmer
	1		1		P -		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Exit		Exit / Cancel / Clear
	9		9		Red		Red / Netflix / Search
	Options		Setup / OPT /		Green		Green / APP / Repeat
	0		0		Yellow		Yellow / YouTube / Repeat
	Screens		Display / Media		Blue		Blue / Prime Video / Random
	Vol +		Vol+		TTX		Text / Goto
	Favourites		Fav / Marker / PC		Pause		Pause / Step / Freeze





Original	Recharge	Original	Recharge
V-Format	Picture / Format		
EPG	Guide / EPG / -/--		
i	Info / Angle		
Timer	+ Shift + Sleep / Timer		
I / II	Audio / Lang I/II		
SUB-T	Subtitle / EQ		

