












 

 
 
 
 





 

 
 
 









 
 
 
 

 
 

 









	Original	Rechange		Original	Rechange
	Power		Power		>>
	Muting		Mute		<<
	1		1		<<
	2		2		Enter
	3		3		Treble
	4		4		Bass
	5		5		Repeat
	6		6		CD Play/Pause
	7		7		Tape <>
	8		8		Stop
	9		9		Tuner/Band
	10/0		0		Shuffle/Program
	>10		Guide		Function
	Clear		Exit		Dimmer
	Preset Up		Up		Sleep
	Preset Down		Down		Display
	>>		>>		Volume+
					Vol +





Original		Rechange		Original		Rechange	
	Volume-		Vol -				
	Clock		3D				
	Tuner Mode		Format				
	Timer		Shift + AV				
	Rev Mode		Subt				
	AUX		AV				

