



Original	Rechange
Open / Close	Eject / Surround
Display	Display / Media
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/--
GOTO	+  Shift + Text /
Title / TTX	Text / Goto
Title / TTX	Sound / Title

Original	Rechange
Subtitle	Subtitle / EQ
Angle	Info / Angle
Language	Audio / Lang I/II
Menu	Menu / Home
Up / CH +	CH+ / Page+
Up / CH +	Up
Setup	Setup / OPT /
Left	Left
Enter	OK
Right	Right
<<	<< / Tune-
Down / CH -	Down
Down / CH -	CH- / Page-
>>	>>  / Preset+
>>	>> / Tune+
Play / Pause	Pause / Step / Freeze
Play / Pause	Play / Slow



