





 

 

 



 

 



 









 







 

 

 

 

 

 



Original	Recharge
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[ ]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡≡]	 Audio / Lang I/II
 I-III/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Original	Recharge
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5






 




Original		Rechange	
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

Original		Rechange	







Original	Recharge	Original	Recharge
0	 Eject / Surround	 [≡]	 Text / Goto
-0-	 Subtitle / EQ	 Left	 Left
Power	 Power	 Up	 Up
Rec	 Rec / Rec Mode	 Right	 Right
I<<	 I<< / Preset-	 OK	 OK
Red	 Red / Netflix / Search	 Down	 Down
Green/[ [ ] ]	 Green / APP / Repeat	 Vol+	 Vol+
Stop	 Stop / Hold	 Mute	 Mute / Dimmer
Play	 Play / Slow	 P+	 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat	 Vol-	 Vol-
>>I	 >>I / Preset+	 Smart J	 Sound / Title
AV/[?]	 AV / Input / RDS	 P-	 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II	 Smart [ ]	 Smart / List
[<>]/[+]	 Zoom / Size	 1	 1
PIP [■]	 Picture / Format	 2	 2
Menu	 Menu / Home	 3	 3
Pause	 Pause / Step / Freeze	 4	 4

Original	Recharge	Original	Recharge
0	 Eject / Surround	 [≡]	 Text / Goto
-0-	 Subtitle / EQ	 Left	 Left
Power	 Power	 Up	 Up
Rec	 Rec / Rec Mode	 Right	 Right
I<<	 I<< / Preset-	 OK	 OK
Red	 Red / Netflix / Search	 Down	 Down
Green/[ [ ] ]	 Green / APP / Repeat	 Vol+	 Vol+
Stop	 Stop / Hold	 Mute	 Mute / Dimmer
Play	 Play / Slow	 P+	 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat	 Vol-	 Vol-
>>I	 >>I / Preset+	 Smart J	 Sound / Title
AV/[?]	 AV / Input / RDS	 P-	 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II	 Smart [ ]	 Smart / List
[<>]/[+]	 Zoom / Size	 1	 1
PIP [■]	 Picture / Format	 2	 2
Menu	 Menu / Home	 3	 3
Pause	 Pause / Step / Freeze	 4	 4





Original		Rechange	
	5		5
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

 
 


 









 

 




 
Original		Rechange	







Original	Rechange
 Power	 Power
 -O-	 Subtitle / EQ
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡ ≡]	 Audio / Lang I/II
 [<>]/[+]	 Zoom / Size
 Pause	 Pause / Step / Freeze
 [≡]	 Text / Goto
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 Smart J	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Fav / Marker / PC

