












 


 








 














 

















 



 





 







Original		Recharge		Original		Recharge	
	Power		Power		Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search		I<		I<< / Preset-
	Green		Green / APP / Repeat		Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat		Eject		Eject / Surround
	Blue		Blue / Prime Video / Random		>I		>>I / Preset+
	PopUp Menu/Disc Menu		D.Menu / Top		<<		<< / Tune-
	Home		Menu / Home		>>		>> / Tune+
	Top Menu		Picture / Format		1		1
	Up		Up		2		2
	Left		Left		3		3
	OK		OK		4		4
	Right		Right		5		5
	Down		Down		6		6
	Back		Back / Return		7		7
	:≡		Smart / List		8		8
	:≡		Setup / OPT /		9		9
	Play		Play / Slow		Subtitle		Subtitle / EQ





	Original	Rechange	Original	Rechange
	0	 0		
	Audio	 Audio / Lang I/II		

