




 




 

 
 
 



 
 
 

 


 


 
 
 

 
 






Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep
	Mute		Mute		TV/R		TV/R
	Red / Reset		Red		Menu		Menu
	Green / TXT		Green		Exit		Exit
	Green / TXT		Text		Up / CH+		Up
	Yellow		Yellow		Left / Vol-		Left
	Blue / Panel		Blue		OK		Ok
	<<		<<		Right / Vol+		Right
	>>		>>		Down / CH-		Down
	I<<		I<<		SAT		Media
	>>I		>>I		Back		Back
	Play		Play		Vol+		Vol +
	Pause		Pause		Vol-		Vol -
	Stop		Stop		CH+		Ch +
	Rec		Rec		CH-		Ch -
	FAV		Pre Ch		INF		Info
	Freeze		Smart		EPG		Guide



