





 









 

 




 
 


 



 



 
 


 
 

 
 



 


 
 
 

 
 
 






 








Original	Recharge	Original	Recharge
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Sat	 Shift + 0
 3	 3	 Down	 Down
 4	 4	 FAV	 Fav / Marker / PC
 5	 5	 TV / Radio	 TV/Radio /
 6	 6	 Guide	 Guide / EPG / -/-
 7	 7	 Freeze	 Pause / Step / Freeze
 8	 8	 Aux In	 AV / Input / RDS
 9	 9	 UHF	 Smart / List
 Recall	 Back / Return	 Red / Audio	 Audio / Lang I/II
 0	 0	 Red / Audio	 Red / Netflix / Search
 Info	 Info / Angle	 Green / Positioner	 Green / APP / Repeat
 Menu	 Menu / Home	 Yellow / Text	 Yellow / YouTube / Repeat
 Exit	 Exit / Cancel / Clear	 Yellow / Text	 Text / Goto
 Up	 Up	 Blue / Audio R/L	 Blue / Prime Video / Random





Original

Recharge

ALC/D R/L  Blue / Audio R/L	TITLE SOUND  Sound / Title

Original

Recharge

