





 


 







 






 







 
 



 





 
 


 




 


 




 




 




Original		Rechange		Original		Rechange	
	Power		Power		i		INFO
	Mute		MUTE		EPG		MEDIA
	1		1		Exit		EXIT
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Left		LEFT
	6		6		Ok		OK
	7		7		TV / Radio		TV/R
	8		8		Zoom		WIDE
	9		9		Prog -		CH -
	0		0		Prog +		CH +
	Pause		Pause		F1		OPT+
	Fav		VOD		P/N		BACK
	Sat		-/-- / EPG		Text		TEXT
	Recall		P/C / FAV		Subtitles		Subt.
	Menu		MENU		Red / Audio		Red (A)





Original	Recharge
Audio	Audio
Green / Mosaic	Green (B)
Yellow / Clock	Yellow (C)
Blue / Text	Blue (D)
TV/SAT	SRC
Vol -	VOL -
Vol +	VOL +
Page +	Last
Page -	First
Page -	Rewind
Page +	Fast Forward
UHF	V-FOR
PIP	Shift + V-FOR

Original	Recharge

