



Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-





Original		Recharge		Original	Recharge
	Green / >>		>> / Tune+		
	Green / >>		Green / APP / Repeat		
	Yellow / <<		<< / Preset-		
	Yellow / <<		Yellow / YouTube / Repeat		
	Blue / >>		Blue / Prime Video / Random		
	Blue / >>		>> / Preset+		
	Text / Play/Pause		Text / Goto		
	Text / Play/Pause		Pause / Step / Freeze		
	Text / Play/Pause		Play / Slow		
	Stop / Still		Stop / Hold		
	Timer / Subtitle		Subtitle / EQ		
	Size / Aspect		Zoom / Size		
	Cancel [≡X]		Shift + Exit / Cancel / Clear		
	Radio		TV/Radio /		
	Audio / I/II		Audio / Lang I/II		
	Rec		Rec / Rec Mode		





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/-		<<		<< / Tune-





Original	Recharge
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
[=]	Text / Goto
Stop/Still	Stop / Hold
[=+]	Picture / Format
[=o]/Subtitle	Subtitle / EQ
[=◆]/[+]	Zoom / Size
[=x]	Setup / OPT /
Radio	TV/Radio /
Audio	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Recharge

