






















































| Original | Recharge |
|---|---|
|  RC |  D.Menu / Top |
|  M |  Menu / Home |
|  F |  Smart / List |
|  Power |  Power |
|  E |  Display / Media |
|  i |  Info / Angle |
|  Sleep / Timer |  Sleep / Timer |
|  TV |  TV/Radio / |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Mute |  Mute / Dimmer |
|  A |  Audio / Lang I/II |
|  R |  Back / Return |
|  1 |  1 |

| Original | Recharge |
|---|---|
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |

