









Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Favourite	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 FAV-	 Shift + CH- /
 0	 0	 FAV+	 Shift + CH+ /
 Recall	 Back / Return	 Info	 Info / Angle
 Vol+	 Vol+	 P-Mode	 Picture / Format
 I/II	 Audio / Lang I/II	 S-Mode	 Sound / Title
 PR+	 CH+ / Page+	 ARC	 Display / Media




















 









 










Original		Rechange	
	EPG		Guide / EPG / -/--
	Text		Text / Goto
	Mix	+	Shift + Text /
	Size		Zoom / Size
	Reveal		D.Menu / Top
	Hold		Stop / Hold
	Index		Smart / List
	S.Page		Eject / Surround
	S.TITL		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Rechange	





Original	Recharge	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Original	Recharge	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





Original	Recharge	Original	Recharge
Return TV	PROGRAM TV/RADIO		TV/Radio /
Menu video	TOP MENU D.MENU		D.Menu / Top
Text	GOTO TEXT		Text / Goto
Txt Expand	SIZE ZOOM		Zoom / Size
TV/AV	RDS AV INPUT		AV / Input / RDS
On/Off			Power
Menu Up			Up
Display	MEDIA DISPLAY		Display / Media
Menu Left			Left
OK Enter			OK
Menu Right			Right
Menu Off	CLEAR EXIT CANCEL		Exit / Cancel / Clear
Menu Down			Down
Back	RETURN BACK		Back / Return
Volume+			Vol+
Chan.Up			CH+ / Page+
Volume-			Vol-

