


 


 
 




 
 

 
 

 





 





 









 


 
 


 

 

 

 





 








 


 
 





Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		CH-		Ch -
	8		8		CH+		Ch +
	9		9		Red		Red
	0		0		Green		Green
	TV / R		TV/R		Yellow		Yellow
	AV		AV		Blue		Blue
	Menu		Menu		APP		Media
	Text		Text		SUB		Subt
	Back		Back		List		List





	Original	Recharge		Original	Recharge
	i	 Info			
	Audio	 Dual			
	EPG	 Guide			

