




 



 
 


 


 




 






 



 


 



 
 

 


 





 
 
 
 
 





 





Original		Rechange		Original		Rechange	
	Power		Power		Stop		Stop
	1		1		Rec		Rec
	2		2		Eject		Eject
	3		3		SP / LP		3D
	4		4		Up / PR+		Up
	5		5		I>		Shift + Play
	6		6		Up / PR+		Ch +
	7		7		Down / PR-		Down
	8		8		Down / PR-		Ch -
	9		9		Right		Right
	0		0		Left		Left
	TV / VCR		TV/R		OK		Ok
	AV		AV		Menu		Menu
	Pause		Pause		PAL / SEC		Format
	<<		<<		Index-		I<<
	Play		Play		Index+		>>I
	>>		>>		A.SEL		Smart

