

























 



 



 


 
 



 

















Original		Rechange		Original		Rechange	
	Power		Power		5		5
	PR+		CH+ / Page+		6		6
	Up		Up		7		7
	Vol-		Vol-		8		8
	Left		Left		9		9
	E		OK		Sleep		Sleep / Timer
	Right		Right		0		0
	Vol+		Vol+		Mute		Mute / Dimmer
	Down		Down		Normal		Smart / List
	PR-		CH- / Page-		Recall		Back / Return
	[]		Subtitle / EQ		System		D.Menu / Top
	Input		AV / Input / RDS				
	Menu		Menu / Home				
	1		1				
	2		2				
	3		3				
	4		4				

