



Original	Rechange
DVD / TV / AV	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Mute	Mute
Repeat / TV/Radio	TV/R
Repeat / TV/Radio	+ Shift + Text
Exit	Exit
Up / CH+	Up
Up / CH+	Ch +

Original	Rechange
Down / CH-	Down
Down / CH-	Ch -
Right / Vol+	Right
Right / Vol+	Vol +
Left / Vol-	Left
Left / Vol-	Vol -
OK	Ok
Pg Up	+ Shift + Ch +
Pg Dn	+ Shift + Ch -
Title	Smart
Info	Info
Goto / FAV	Pre Ch
Audio	Dual
Sub-T	Subt
Zoom / TTX	Text
Zoom / TTX	Eject
Setup	Options



