


 














 
Original	Rechange
Standby	Power
Auto / Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tv / Radio	TV/Radio /
Recall	Back / Return
Vol+	Vol+
Title / Pr List	Shift + Sound / Title
Title / Pr List	Smart / List

Original	Rechange
Menu / EPG	D.Menu / Top
Menu / EPG	Guide / EPG / -/-
Ch+	CH+ / Page+
Vol-	Vol-
FAV	Fav / Marker / PC
Ch-	CH- / Page-
Up	Up
Left	Left
Enter	OK
Right	Right
LCD Menu / Exit	Menu / Home
Down	Down
DVD Setup / Exit	Setup / OPT /
DVD Setup / Exit	Shift + Exit / Cancel / Clear
Input	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title





Original	Recharge
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Exit / Stop	 Exit / Cancel / Clear
 Exit / Stop	 Stop / Hold
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Zoom	 Zoom / Size
 Subpage / Goto	 Text / Goto
 Index / I<<<	 I<<< / Preset-
 Size / >>>I	 Shift + Zoom / Zoom /
 Size / >>>I	 >>>I / Preset+
 Reveal	 Display / Media
 Subtitle	 Subtitle / EQ
 Red / Mode	 Red / Netflix / Search

Original	Recharge
 Green / Clear	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Yellow / Repeat	 Shift + Green / APP /
 Blue / AB	 Blue / Prime Video / Random
 Blue / AB	 Shift + Yellow / YouTube /

