


 



 








Original	Rechange	Original	Rechange
	Power		Power
	PP		Pre Ch
	Mute		Mute
	I-II		Dual
	P<P		Back
	-/--		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	M		Ok
	PR+		Ch +
	PR-		Ch -
	M		Menu
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]		Text
	[≡o]		Smart





Original	Recharge	Original	Recharge
 [=+]	 Subt		
 [=x]	 Options		
 [.:≡]	 Media		
 [=?]	 Format		
 [=i]	 List		
 [=◆]	 3D		
 [i]/Info	 Info		

